


LiveWall (Green Wall) Elevation FRONT VIEW - STANDARD SIZE PLANTERS

S1

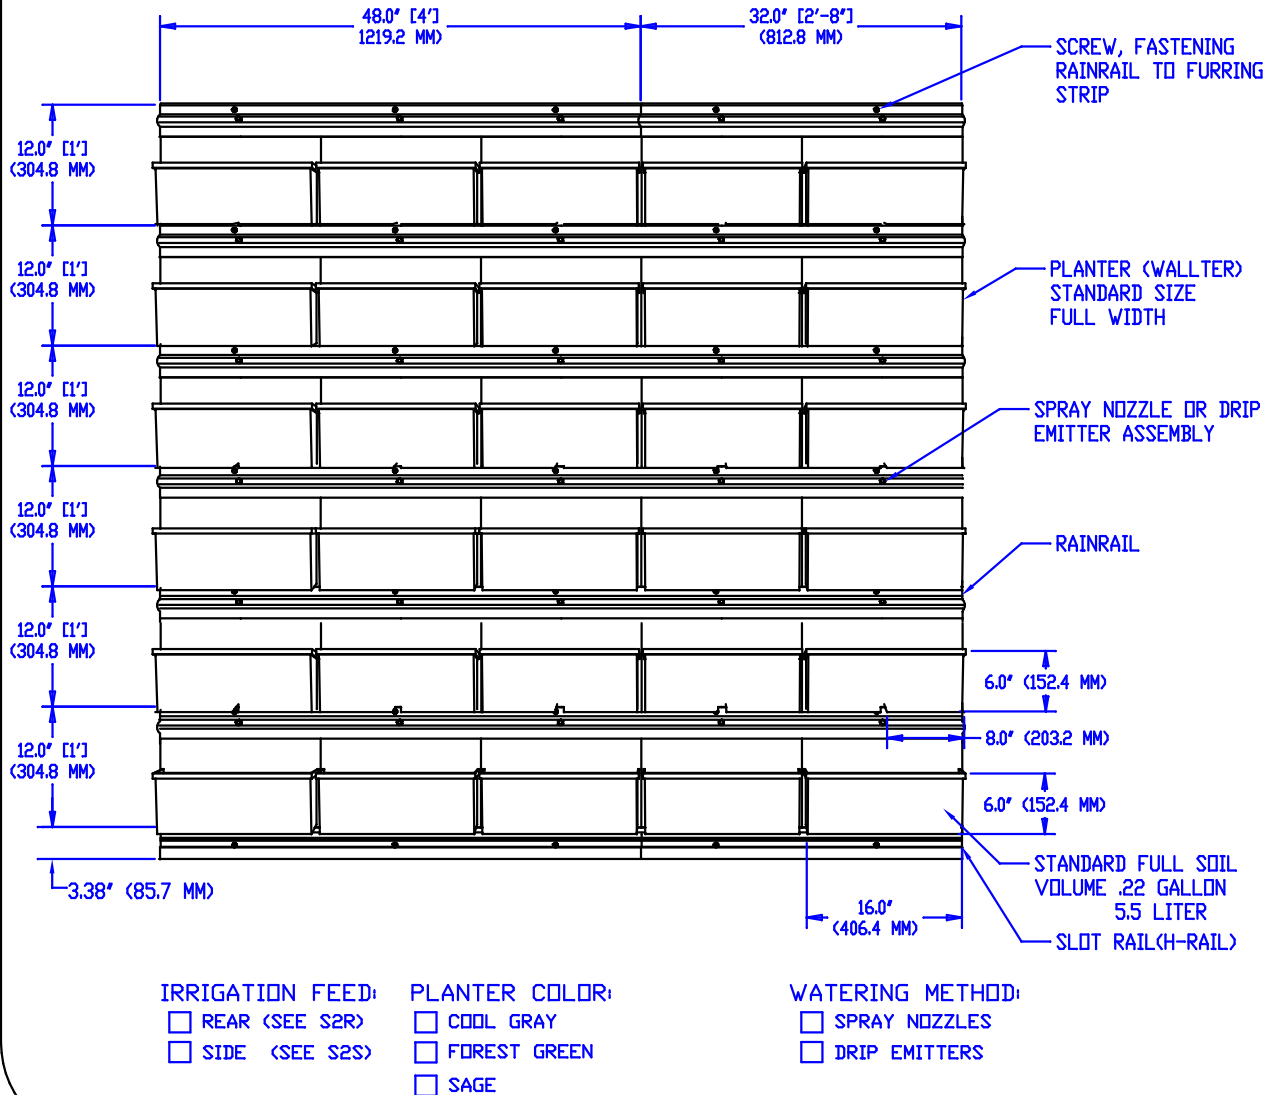

NOTES:

1. USED OUTDOORS.
2. STANDARD SIZE PLANTERS DRAIN FROM THE BOTTOM.
3. SITE DRAINAGE REQUIRED.
4. SPRAY NOZZLES TYPICALLY USED OUTDOORS, DRIP EMITTERS MAY BE USED WHERE APPLICABLE.

LiveWall®

LiveWall, LLC
P.O. Box 533
Spring Lake, MI. 49456

www.livewall.com

(877) 554-4065

Rev. 10/14/2022